



How to release a SuperSensor Pin using a Sensormatic Detacher

- Correct handling

Grip the pin by the protected garment and lead the tag into the detacher. You can do this using only one hand.

A gentle pressure on the pin is enough to relax the patented spindle clutch in the tag and to activate the opening mechanism of the detacher.

When you feel the probe is fully inserted in the tag, you can pull out the pin.




- wrong handling

Two hand operation is slower.

When you only press the tag tail to activate the detachers opening mechanism, the spindle lock possible is not relaxed.

It than would not release and not allow you to pull out the pin.

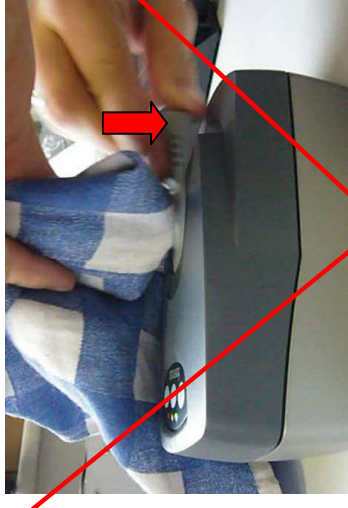

Even easier operation is possible using a WG SuperLock Detacher.